

Additional Instructions

Battery connection

If your VIGIL doesn't start as stated in the manual disconnect the batteries for 1 minute. This will allow the capacitor to have time to discharge. Then repeat step 1.

Mode 5

Detection delay.

Delay between each event if necessary.

Example: Adjust the delay to 10 minutes.

Event is recorded at 6:00, next event to be recorded at 6:10

Event Capture on / off

After you have activated the event record, please take note that there is a 2 minute delay before the VIGIL starts recording events.

4 AA Batteries

Use alkalines batteries because they are better in cold weather. Never use 9 volt batteries, you can cause serious damage to the VIGIL.

Storage


After hunting season, store your vigil by removing the batteries and making sure that the interior is dry. This will prevent damage due to oxydation.

Warranty

VIGIL Game Timer have a 1 year warranty. Warranty service for VIGIL products may be obtained by delivering the defective product, accompanied by a copy of the dated proof of purchase, to Circuitronique Estrie Inc Service center during the applicable warranty period. Products returned to service center must be sent prepaid, insured and packaged appropriately for safe shipment. The repaired item will be shipped to Customer, at Circuitronique Estrie Inc. expense, not later than (30) day after receipt by CE Inc.

Available optionnal connection:

Camera

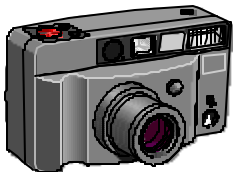

Camcorder



Computer



The real big game timer

125, 250,
500, 1000

User Manuel

Thank you to have chosen one of our VIGIL Big Game Timers.


Here is your VIGIL serial number:

For owner of VIGIL 125 your code is:

VIGIL is the result of the intensive research by a special entreprise in high hand electronic product conceptions. It was designed to help you to have more hunting success.

The VIGIL detects the movements of your game within a certain range and records both the day and the time of sighting. The VIGIL makes no noise, has no string or light to draw attention to its location.

The VIGIL is your guide. It solves the problem of supervising a trail, salt block or feeding place. Your VIGIL is easy to use and has many interesting features to help you to give a better evaluation of your hunting territory.

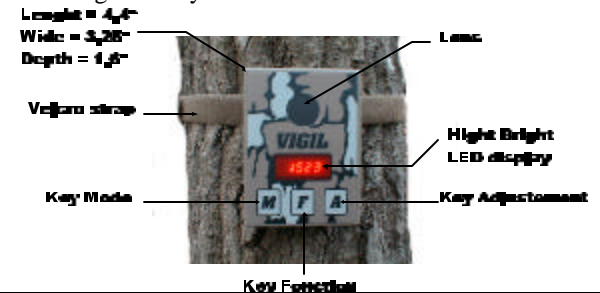

Made in Canada by:
Circuitronique Estrie Inc.
6291 Tellier, Rock Forest, Quebec, Canada J1N 3A8
Phone: (819) 864-4637 Fax: (819) 864-4637
WEB site: www.vigil.qc.ca
email: info@vigil.qc.ca

Step 1

Install batteries in Vigil close the front cover

- < At the prompt ``Circuitronique Estrie Inc. 819-864-4637`` press key M
- < The word CodE will flash on the screen.

For the VIGIL 250, 500, 1000 write your 6 digit own code here: _____

The code your are enter it will be your code for always. Enter the six digit and read carefully the instruction below.

Security Code Entry

- < press key M for C___ to show
- < press key M to enter the first digit of your code
- < press key F to enter the second digit of your code
- < press key A to enter the third digit of your code
- < wait 3 seconds for the c___ to show
- < press key M to enter the forth digit of your code
- < press key F to enter the fifth digit of your code
- < press key A to enter the last digit of your code
- < Wait 3 seconds for the Fr to show
- < You are now ready to select the language by pressing the A key (Fr = French En =English)
- < Press the M key to validate choice
- < If you hear a beep with 2 tones your code has been validated
- < If you hear a beep with 1 tone your code has not been validated
- < (please try step 1 again)

Mode 1 = Event Browsing

By pressing the M key you will see Exxx = x events . To visualize each event press the F key, the display will show E001 for the first event. Pressing the F key will show events in ascending order while the A (Vigil 250,500, 1000 only) key will display in descending order. Press F key to see the day (d-01 = day 1). Press again the F key to see the hour of the event (13:16 = 1:16 pm). Continue to press the F key to visualize the next event. Press the M key to pass to the next mode.

Mode 2 = Date and Time Adjustment

- < By pressing the M key you will see M-2, releasing M key will display 00:01
- < By pressing the F key you will see (m02 = 2 mins). By pressing A key will adjust the minutes
- < By pressing the F key you will see (H 00 = 0 hour). By pressing A key will adjust the hours
- < By pressing the F key you will see (d 01 = day 1) By pressing A key will adjust the day of month
- < By pressing the F key you will see (M01 = January) By pressing the A key adjusts the month
- < Pressing the F key will show the adjusted time
- < Press the M key to pass to the next mode.

Mode 3 = Battery Test

- < When entering this mode you will see -b
- < Pressing F key starts the test if your batteries are good you will see Good
- < If not then you will see bad
- < Press the M key to pass to the next mode.

Mode 4 = Event Resetting

- < When entering this mode you will see -r
- < Pressing F key reset your VIGIL to 0 events
- < Press the M key to pass to the next mode.

Mode 5 = Delay Entry

- < When entering this mode you will see d-10
- < Pressing F key or the A key adjusts the time of delay (from 1 min to 60 mins)
- < Press the M key to pass to the next mode

Mode 6 = Detection Zone Test

- < When entering this mode you will see -A
- < Press the F key to start the test. Step back from VIGIL off to one side and advance slowly forward upon hearing sound from VIGIL, stop for 5-6 seconds after sound ends. Repeat this step.
- < Press the M key to pass to the next mode

Mode 7 = Video Camera Option (Available only on the models 250, 500, 1000)

For owner of VIGIL 125 camera is automatically in fonction, they will take a picture each time they record an event.

- < When entering this mode you will see Coff
- < Pressing F key or the A key will adjust the time of delay (from 10 secs to 60 secs)
- < If you see CoFF then the video camera options is off but the camera will be on and take a picture each time they record an event.
- < Press the M key to pass to the next mode

Event Capture on / off

- < In this mode nothing is displayed
- < Pressing the A key will turn on or off the capture of events
- < ON = ---A OFF = ---d

Characteristics

Security - 6 numbers security code	LED display or LCD display
Memory - Up to 1000 recordings	Waterproof enclosure
Range - Over 100 feet	Temperature range - -40C to + 70C
Detection zone - 12 degrees	Attachement - VELCRO strap
Appearance - Camouflage marking	Technologie - Microprocessor
Battery consumption - 60 days or more	Warranty 1 year parts and labor

