


# VIGIL DIGITAL PBOX

## DIGITAL CAMERA SETTING

- Install your 2 AA NI-MH batteries in the digital camera
- Open the lens cover all the way
- Press the OK switch in the back of the digital camera
- The screen will show different menus.
- Choose the MODE MENU with the right arrow key and press the down arrow key 3 times to select the SETUP menu and press the right arrow key to enter on the SETUP menu.
- Press the right arrow key to select ALL RESET menu, you will see an ON/OFF choice, press the up arrow key to the OFF option, and then press OK switch to confirm this choice.
- Press the down arrow key to select -))) menu. Press the right arrow key to enter this menu, you will see an ON/OFF choice, press the up arrow key to the OFF option, and then press OK switch to confirm this choice.
- Press the down arrow key to select REC VIEW menu. Press the right arrow key to enter this menu, you will see an ON/OFF choice, press the up arrow key to the OFF option, and then press OK switch to confirm this choice.
- Press the down arrow key two times to go to the time and date menu. Press the right arrow key to enter the date menu. Choose the format for the date with the UP / DOWN arrow key. Press the right arrow key to set the data on the format (year, month, day / day, month, year or whatever format you had chosen). If you continue pressing the right arrow key you will be able to set the time in hours and minutes.
- Press the OK switch two times to confirm these adjustments.

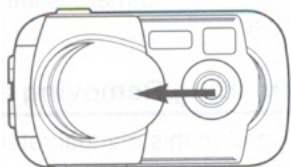

**Power on. Slide the lens cover until the label on the cover is aligned with the green label on the camera. Don't slide the cover beyond the green label, because after 5 minutes the camera will shut down.**



Camera shut on



Please note that there is a 30 second delay before the first picture is taken. This allows enough time to you to leave without being detected.

Camera shut off



Turn switches on and off to set the sensitivity of the detector and the delay between picture

Dip switch	Delay
	15 Sec.
	1 minute
	5 minutes
	15 minutes
	30 minutes
	60 minutes
	Sensitivity High sensor (squirrel, bird, etc...)
	Medium sensor (Rabbit, Raccoon, etc...)
	Low sensor (Moose, Deer, Bear, etc...)

4 AA batteries

If the red light flashes change the 4 AA batteries.

### Recommendations:

**Install your VIGIL PBOX between 4 to 5 feet off the ground**

**Use AA size batteries. (2 AA (NI-MH)batteries for the camera and 4 AA (Alcaline)batteries for the detection circuit)**

**The FLASH working range is 20 feet. The detection range is over 50 feet.**

**To know how to use the digital camera please refer to the Olympus guide.**

**Please note that there will be at least delay between pictures.**